




# SHORT ----- CUTS

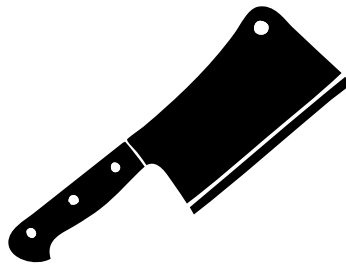

## **mhouse** | **CONNECT A REMOTE**

- \* STANDARD MODE
- \* ADVANCED MODE
- \* DELETE A REMOTE

WATCH THE VIDEO  
[EASYGATE.COM.AU](http://EASYGATE.COM.AU)



# GTX4 REMOTE



Mhouse GTX4 remotes have two modes.

**STANDARD Mode-1** connects the remote to only one motor. Each of the four buttons is assigned set tasks.

**ADVANCED Mode-2** is used to customise GTX4 settings. Also when connecting multiple automation systems (e.g. 2nd gate, garage door/s, lights, watering system) to the Mhouse remote.


## CONNECT IN STANDARD MODE-1

Remotes supplied in motor kits come already connected and ready to operate a single gate motor.

Standard mode sets all four buttons with pre-set commands (right).

- 1 Press & hold P1. Release P1 when light comes on. Complete step-2 within 10sec.
- 2 Press a T-button for 3sec+. When connected P1 flashes 3 times.

Additional remotes - repeat step 2 while light is on (within 10sec.).

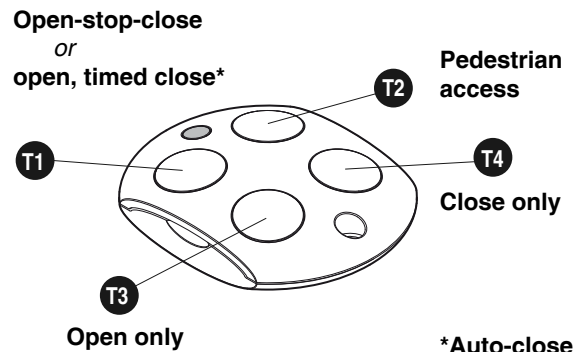

\*Auto-close function is set on the control board.

## DELETE A REMOTE

- 1 Press & hold P1 button. Continue to hold after the light comes on.
- 2 Press & hold a remote button. Release both buttons after P1 light flashes 5 times.

Done!  
The remote is disconnected from the control board.



# CONNECT IN ADVANCED MODE-2

Before a remote can be set from Standard to Advanced mode it needs to be disconnected (deleted) from the control board.

Unlike mode-1 where all T-buttons are pre-programmed, mode-2 needs buttons to be programmed individually.

Commands are set using P1 button.


- 1 Press P1 number of times to match the command. See Advanced Functions.
- 2 Hold T-button 3sec.+ to assign command.

P1 light will flash the same number as the command to confirm.

E.g.  
Setting Pedestrian access command:

*Step1: Press P1 twice.*  
*Step2: Hold T2*  
*P1 light will flash 3-times*  
*Done.*

To set additional Mhouse remotes with the same command, repeat step-2 within 10sec.

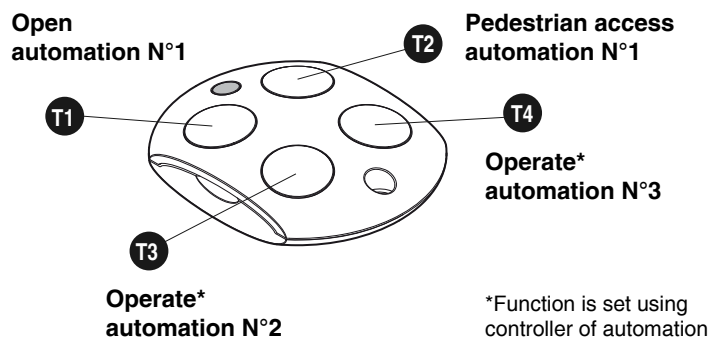

ADVANCED FUNCTIONS	
PRESS P1	COMMAND
Once	"Open"
Twice	"Ped. opening"
Three times	"Open only"
Four times	"Close only"
Five times	"Stop"
Six times	"Apartment block" open
Seven times	"High priority open"
Eight times	"Pedestrian opening 2"
Nine times	"Pedestrian opening 3"
Ten times	"Open+ block automation"
Eleven times	"Close + block automation"
Twelve times	"Block automation"
Thirteen times	"Unblock automation"

